

## 3169-20,3169-21 CLAMP ON POWER HITESTER

**Power Measuring Instruments** 



Measure up to two 3-phase, 3-wire systems (displays voltage and current for three lines)
 Measure up to four single-phase, 2-wire systems

0.5 A to 5000 A range

- Compact and light weight
- PC card data storage
- Power recording for individual waveforms
- Simultaneous recording of demand values and harmonics
- 9625 POWER MEASUREMENT SUPPORT SOFTWARE

The photo shows the 3169-21 combined with the 9661 and 9669 CLAMP ON SENSORS (optional) for measuring two systems. The 3169 3001 can also be used in combination with CLAMP ON SENSORS (optional)

The 3169-2021 can also be used in combination with  $\mbox{CLAMP}$  ON SENSORS (optional) rated up to 5000 A.

## Offering a new approach to energy-related measurement

R. 000344

such as energy conservation, ISO14001 testing, equipment diagnosis, and harmonics measurement.

Measures power lines of up to 254 mm in diameter



The 3169-20 and 3169-21 are CLAMP ON POWER HITESTERS that allow measurement of single-phase to three-phase 4-wire circuits with a single unit. In addition to measuring standard parameters such as voltage, current, power, power factor, and integrated values, these clamp-on power meters can simultaneously perform demand measurements required for carrying out power management and energy-saving measures, as well as harmonic measurements. The two new power meters also feature PC card data storage, and come equipped with an RS-232C interface for PC communications. Further, with greater data processing speeds, it is possible to measure the power of just a few cycles, enabling more detailed and effective energy-saving measures for equipment. The 3169-20 and 3169-21 are ideal for users who want to achieve close control over energy-saving management activities and measures.



**ISO14001** JQA-E-90091



JQA-E-90091 HIOKI company overview, new products, environmental considerations and other information are available on our website.



#### Measure power lines of up to four systems (with a common voltage)

One single unit can measure four circuits (single-phase 2-wire), two circuits (3-phase, 3-wire), or a one circuit (3-phase, 4-wire)system.

#### A wide range of measurement functions

The 3169-20/21 can simultaneously measure voltage, current, power (active, reactive, and apparent), integrated power, power factor, and frequency. Further, when using 3-phase, 3-wire (3P3W2M) mode, you can display the voltage and current for all three lines by measuring just two of them. When using the 3-phase, 4-wire (3P4W4I) mode, neutral line current can be displayed using 4 current measurement.

#### Equipped with ranges from 5 A to 5000 A

The power meters support four types of clamp-on current sensors to enable measurement for a variety of items, from CT terminals to large current and thick power lines.

#### Supports high-speed data storage from individual waveforms

When using the standard mode to perform integrated power measurement, you can store data in intervals starting from one second, and when simultaneously measuring integration and harmonics, in intervals starting from one minute. When in the fast mode, you can store RMS data for individual waveforms.

#### PC Card compatible plus internal hard drive for extra memory

Store valuable measurement data in convenient PC cards. The internal memory (1 MB) supports measurement over extended periods and detailed measurement parameters.

#### Housed in a compact A5 body size

The 3169-20 and 3169-21 feature a compact design that makes them portable and easy to use in tight spaces, and are approximately 30% more compact than the 3166 CLAMP ON POWER HITESTER.

#### Multi-language Compatibility (Available soon)

Select from six languages, including Japanese and English.

#### Detect incorrect connection using vector diagrams

Use the vector display on the connection confirmation screen to check the phase, whether a connection is loose, or whether the clamp-on sensor connection has been reversed during VT/CT terminal measurement.

## Polarity display and measurement using the reactive power measurement method

The units come equipped with a polarity display for checking LAG/LEAD when measuring power factor or reactive power. Further, you can select the reactive power measurement method, or display the phase factors for RMS values and power comparison.

#### High-speed D/A output

The 3169-21 comes equipped with 4-channel high-speed D/A output to enable analog output of RMS values for individual waveforms.

#### Ideal for power and harmonics management

The power meters come equipped with a harmonics measurement function that supports measurement of 3-phase power lines. They can also perform simultaneous measurement of harmonics and demand values, enabling both power and harmonics management.

## The ultimate in clamp-on power meters!



#### External I/O terminal pin placement

Pin	Signal name		
1	Start/stop input		
2	Free		
3	Status output		
4	Data storage input		
5	GND		
-			

Use the 9440 CONNECTION CABLE to connect to external devices.

### Range Configuration Table

$\swarrow$					9661 (	CLAMP ON SE	ENSOR	
	Current	9694 CLAMP ON SENSOR			9660 CLAMP	ON SENSOR		
	$\searrow$		(CAT III 300V)		(CAT III 300V)			
Voltage (	Connection	500.00mA	1.0000A	5.0000A	10.000A	50.000A	100.00A	500.00A
	Single-phase 2-wire	75.000 W	150.00 W	750.00 W	1.5000kW	7.5000kW	15.000kW	75.000kW
1601000	Single-phase 3-wire Three-phase 3-wire	150000000	300.00 W	1.5000kW	3.0000kW	15.000kW	30.000kW	150.00kW
	Three-phase 4-wire		450.00 W	2.2500kW	4.5000kW	22.500kW	45.000kW	225.00kW
	Single-phase 2-wire	150.00 W	300.00 W	1.5000kW	3.0000kW	15.000kW	30.000kW	150.00kW
	Single-phase 3-wire Three-phase 3-wire		600.00 W	3.0000kW	6.0000kW	30.000kW	60.000kW	300.00kW
	Three-phase 4-wire	450.00 W	900.00 W	4.5000kW	9.0000kW	45.000kW	90.000kW	450.00kW
	Single-phase 2-wire	300.00 W	600.00 W	3.0000kW	6.0000kW	30.000kW	60.000kW	300.00kW
600.00V	Single-phase 3-wire Three-phase 3-wire		1.2000kW	6.0000kW	12.000kW	60.000kW	120.00kW	600.00kW
	Three-phase 4-wire	900.00 W	1.8000kW	9.0000kW	18.000kW	90.000kW	180.00kW	900.00kW

$\searrow$	Current	9669 C	LAMP ON S	ENSOR		$\searrow$	Current	9667 FLEXIBLE C	LAMP ON SENSOR
Voltage	Connection	100.00 A	200.00 A	1.0000kA		Voltage	Connection	500.00 A	5.0000kA
150.00V	Single-phase 2-wire	15.000kW	30.000kW	150.00kW			Single-phase 2-wire	75.000kW	750.00kW
	Single-phase 3-wire Three-phase 3-wire		60.000kW	300.00kW		11601000	Single-phase 3-wire Three-phase 3-wire	150 000/230/	1.5000MW
	Three-phase 4-wire	45.000kW	90.000kW	450.00kW			Three-phase 4-wire	225.00kW	2.2500MW
	Single-phase 2-wire	30.000kW	60.000kW	300.00kW	1 [	300.00V	Single-phase 2-wire	150.00kW	1.5000MW
300.00V	Single-phase 3-wire Three-phase 3-wire		120.00kW	600.00kW			Single-phase 3-wire Three-phase 3-wire		3.0000MW
	Three-phase 4-wire	90.000kW	180.00kW	900.00kW			Three-phase 4-wire	450.00kW	4.5000MW
	Single-phase 2-wire	60.000kW	120.00kW	600.00kW		600.00V	Single-phase 2-wire	300.00kW	3.0000MW
600.00V	Single-phase 3-wire Three-phase 3-wire		240.00kW	1.2000MW			Single-phase 3-wire Three-phase 3-wire		6.0000MW
	Three-phase 4-wire	180.00kW	360.00kW	1.8000MW			Three-phase 4-wire	900.00kW	9.0000MW

Note 1: The range configuration table displays the full-scale display values for each measurement range. Note 2: In the table, "unit W" has been replaced with "VA" or "var" for the apparentpower and reactive power measurement ranges. Note 3: Voltage and current input values 0.4% or less than the measurement range are displayed as "zero". When either the voltage or current for the power line is zero, the power value is displayed as zero. Note 4: You can display measurement values up to 130% of each measurement range. <sup>3</sup> Measure hidden power waste through secure connections, simple measurement methods, and detailed data capture.


# **Promises reliable measurement for power demand requirements!**

## Select from a variety of data, including detailed and harmonics data for multiple circuits

#### ★ To measure multiple systems simultaneously

#### A single unit can measure two three-phase, 3-wire systems. Further, you can make individual clamp-on sensor and current range settings for each system.


Also, in addition to performing simultaneous measurement for up to four systems (singlephase, 2-wire) with a common voltage, you can set the current range individually for each system. Setting the most suitable current range for both large and small loads allows you to acquire more accurate measurements.

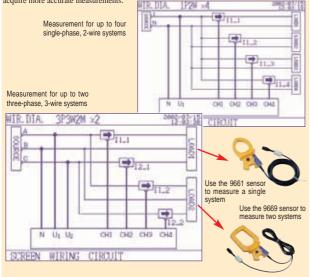

#### \* Having trouble clamping onto thick power lines?

Using the 9667 FLEXIBLE CLAMP ON SENSOR, you can measure power lines that are up to 5000 A AC and up to 245 mm in diameter.

The 9667 FLEXIBLE CLAMP ON SENSOR ability to measure power lines with good phase characteristics carrying up to 5000 A AC and measuring up to 254 mm in diameter allows you to measure the power for large current lines that were previously difficult to measure, such as trunk lines at factories.




#### Simultaneous power and harmonics management

Use a single unit to simultaneously measure data for power and harmonics.

#### All acquired data can be saved onto a PC card.

Power data (including demand data) and harmonics data can be simultaneously saved onto a PC card or in the unit's internal memory. Further, data for all of the systems being measured can be saved when measuring multiple circuits. Each of these two new unit's offers a management system for power and harmonic quality.

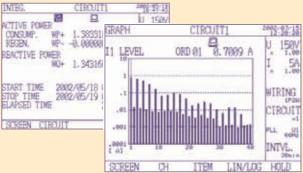


#### ★ When measurement accuracy is crucial

### The addition of a vector display for viewing the connection status completes the preparation required for measurement.

Have you ever experienced incorrect measurement results?

The most common cause of incorrect data is a faulty connection. With the 3169-2021 you can use the vector display to check the phase, whether a connection is loose, or whether the clampon sensor connection has been reversed.

Also, you are assured of proper connection when measuring the VT (PT)/CT terminals even if you cannot see the line you are measuring.

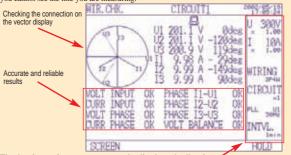

#### The basic settings are constantly displayed, allowing you to measure with confidence.

During measurement, in addition to displaying the voltage and current ranges, and VT (PT) and CT ratios for each system, the unit can also display items such as the measurement interval. Because the basic settings are constantly visible, you can be confident of obtaining the correct measurement results.

#### ★ Capture facility data quickly

By using continuous processing to measure individual waveforms, you can accurately measure data in a relatively short amount of time.


Use the desired measurement method to continuously measure the voltage, current, and power for individual waveforms, enabling you to obtain accurate data in one second or less. Further, you can record the maximum, minimum and average values.

			ST. CIRCUITI	
MAIN	MAIN A MIN. CIRC		1T1 2000 2000-05-19 11 02	A
MAIN MAX.	CIRCUIT1	2003-02-18	U 300V T 24	AAA
UI 201.11 V	II 9.992 A	U 300V	I 10A 14 78	Â
U2 201.11 V U3 201.00 V	12 9.997 A 13 9.994 A	I 10A * 1.00	* 1.00 ** 1.00 WIRING #* 0100	cvi cVi
Uave 201.06 V	Iave 9.994 A 14 0.1632 A	WIRING "	Search Finance	H
P1 1.7435kW P2 1.7462kW	Q 2.9921kvar S 6.0278kVA PF 0.8665	CIRCUIT	FLL UI TAP	-
P3 1.7437kW P 5.2329kW	f 50.010 Hz	FLL UI	INTVL.	
WP+ 0.000001/Wh	0:00:00	INTVL.	HOLD	
SCREEN	MINIMUM	HOLD		

#### ★ Measure another device simultaneously

### Using the external I/O function, you can obtain even more detailed measurements for energy conservation.

In addition to measurement start/stop control through external input, you can use this function to output the measurement start/stop signal for the 3169-20/21. Simultaneous recording of a variety of signals is also possible for equipment when using multiple devices to perform start control and multi-channel recording.

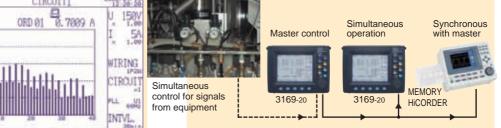

Large storage capacity to accommodate power and harmonics data for individual waveforms. Supports energy saving measures that can be carried out from your PC.

## **Greater flexiblity for energy saving measures through detailed measurement!**


## Reduce energy consumption by "1%"! Why not try analyzing your energy saving measures?

#### ★ Save measurement details to PC card for extended measurements!

#### Why not try a shorter data management interval?

With the 3169-20/21, you can set the data recording interval to 1 minute. If you are unsure how to proceed with energy conservation, you can use a large capacity PC card to save measurement details, then use the data to create a load fluctuation graph and analyze this to help reduce wasted power consumption.

Further, because you can save a variety of data, including simultaneous recording of power and harmonics data, waveform data storage, and print-outs of the screen, these two new units help by storing measurement details.

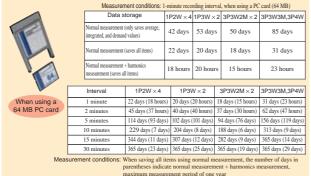


#### ★ Identify even small amounts of power waste using individual waveform measurements

The 3169-20/21 can help turn you into a keen energy saving specialist

These two new units allow you to measure power data by recording the RMS values for individual waveforms.


By measuring just a few seconds of machine cycles or changes in operating patterns of facilities such as manufacturing equipment, you can grasp power fluctuations over a relatively short amount of time and view improvements in the form of numerical data. Gain unsurpassed energy savings by achieving simple improvements around the work environment.

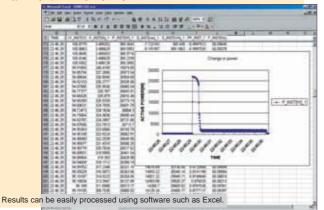

#### ★ Improve energy-saving operations and create an energy-efficient facility

Why not try to improve your energy-saving measures using the 3169-21? Using the D/A output (4 ch) function on the 3169-21, you can simultaneously record a variety


Using the D/A output (4 ch) function on the 3109-21, you can simultaneously record a variety of measurement and control signals for equipment, such as the power fluctuation and temperature/flow for individual waveforms, onto a HIOKI MEMORY HiCORDER or logger. A slight reduction in power consumption due to changes in the inverter motor operating patterns or temperature settings equals to an energy-saving effect.

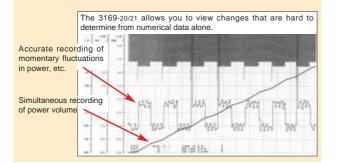

#### ★ Unbalanced loads are an enemy to energy saving activities. Solve your problems with careful management of power lines.


Unbalanced 3-phase loads can result in a damaged power line.

To provide detailed management of measurements, the 3169-20/21 displays voltage and current for all three lines even when measuring just two circuits (3P3W2M). Further, because the effective power for each phase is displayed based on a virtual center point when measuring the voltage and current for all three lines (3P3W3M), the units can also be used to implement energy saving measures and power management systems.

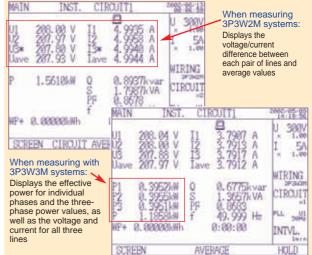

#### ★ Harmonics cause wasted power

Did you think that harmonics and energy saving activities were unrelated? Due to a spread in equipment that uses semiconductor control devices, such as inverters, power quality has decreased. Also, power consumed in harmonic components is all wasted power. Harmonic control and management are essential for energy conservation.

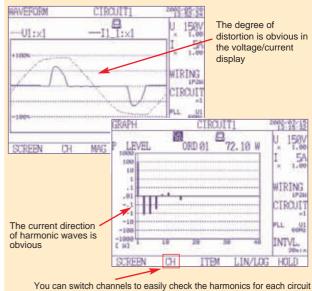

#### ,

★ To identify causal factors with harmonic measurements of multiple systems circuits If production equipment malfunctions, power is wasted if repeated manufacture results in defective products again.


If you think harmonics are causing malfunctions, you can simultaneously measure the harmonics of individual circuits using multi-circuit measurement to obtain detailed information about the occurrence of harmonics along with the current direction for each phase. Using the 3169-2021 you can accurately determine the relationship for harmonic inflow and outflow between power lines by analyzing the data acquired simultaneously, and then devising energy-saving measures based on the cause of the occurrence.

4

## 9625 POWER MEASUREMENT SUPPORT SOFTWARE

# Graphically process measurement data from Model 3169-20/21 easily on a PC!

The Model **9625** POWER MEASUREMENT SUPPORT SOFTWARE application provides easy graphical processing on a computer of measurement data saved on the Models 3169-20/21 and 3166 CLAMP ON POWER HITESTERS.

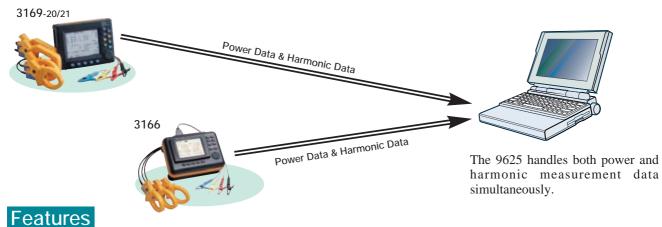

#### ■ Time Series Graph Display Function

Measurement data can be displayed as a time series graph. Demand data measured in different series can be overlaid on the display.

#### Summary Display Function

Measurement data can be displayed directly in table form.

Daily, Weekly and Monthly Report Display Function

Daily, weekly and monthly reports of demand data can be displayed.

#### Harmonic Analysis Function

Display harmonic measurement data as a graph, list or waveform. (Also compatible with the harmonic measurement data captured by Model 3166.)

Each screen can be printed.


#### Easily display and print various screens such as graphs and spreadsheet tables

#### Step 1. Load measurement data

Load up to 16 data sets from the 3169-20/21 or 3166 at once. Measured numerical values and waveform data are recognized and displayed automatically.

- 1. Loading and deleting data, and changing data names, can be done easily.
- 2. Multiple sets of measurement data can be loaded and managed in a single file.



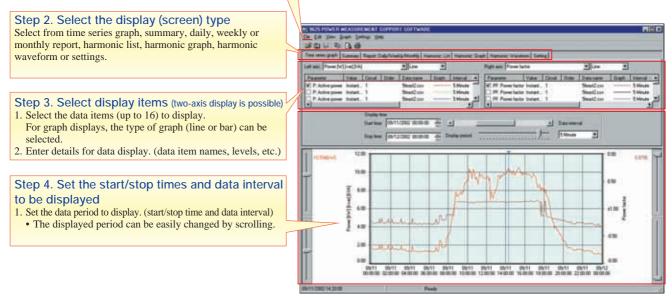

#### Time Series Graph Display Function (two-axes display possible)

The displayed graph can be set to suit particular start/stop times and data intervals. Harmonic time series graphs can be displayed. Convenient Functions

- (1) The horizontal (time) axis can be easily scrolled to show the desired range.
- (2) Upper and lower limits (measurement values) of the vertical axis can be easily set and changed.
  \* Graph type (line, bar or stacked bar), line type (such as solid or dashed), color and details of upper and lower numerical values can be set.
- (3) Any desired numerical data value on a graph can be confirmed and displayed by cursor movement.
   Upper/Lowe Limit Setting Slider
- (4) The display can be switched between 2D and 3D graphs.

#### Summary Display Function

#### Summary

- Displays a summary of the data values between specified start/stop times, at the specified data interval.
- Convenient Functions
- In addition to measurement values within the period being displayed, the summary shows period, maximum, minimum and average values.
- (2) Measurement data names and measurement units can be edited in the summary.

#### Daily, Weekly or Monthly Report Display

- Displays a summary covering the total values in daily, weekly or monthly reports.
- Convenient Functions
- (1) The time axis for each total scrolls to easily change the totalized period.
- (2) The total time range of measurement data can be totalized in up to four sections per time period.

		二:	And a state	1 Marate	III Prost factor Autorit		Bear( per	
		100 ver 100				and a second second	-2	
	10 10 10 10 100		Rost plan I la gala di alta di Pasali I la facadi	esa des Co	****	ri ali a	01 Wetz 100 01000	
I II Water DV   D. Water DV   D. Sant DV   D. Sant DV   P. Athennes   W. Faut Late   Di	Dam ban "	11. 104-pp-(12) 12. 104-pp-(12) 13. 12 14.	Without the local division of the local divi	Direct other Design	Addit Control Strengton Addit Control Strengton Stren	to the holyham		3

■ Harmonic Display Function Harmonic data measured by the 3169-20/21 and 3166 can be displayed in various ways

#### Harmonic Time Series Display

While displaying a time series graph, select the harmonic item for the vertical axis to display a time series graph of harmonics.

#### **Convenient Functions**


 Up to 32 graphs can be displayed simultaneously using 2-axes display.
 For one circuit measurement, up to 22 orders can be

For one circuit measurement, up to 32 orders can be graphed. Using multiple instruments, time series of harmonics can be easily compared.

(2) Any desired chronological detail can be easily confirmed using the cursors on the graph.


#### Harmonic List Display

Displays harmonic data for the selected display item as a list.

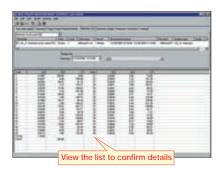

#### Harmonic Graph Display

Displays harmonic data for the selected display item as a bar graph.

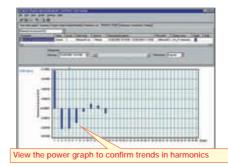






#### Harmonic Waveform Display

Displays the voltage and current waveforms upon which harmonic data is based.

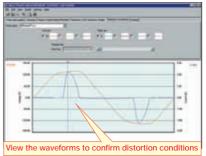

#### Settings Display Function

When you select a data name to be load, the measuring instrument model and setting conditions at measurement time are displayed.


Measurement data and measurement conditions can be managed at the same time.

#### Print Function

Reports and screen copies of the displayed screen can be easily printed. Convenient Functions

- (1) Printing results can be confirmed by print preview.
- (2) When creating a report, screen data can be copied and pasted into a commercial word processor program.

(in Site your South Songe DF (1) Li Ro (1) (B) The source graph (Sonnar) Price	jjole 17 Salij-Avvanig-Alvanhija   Maamana: List   N	Interior Stage, Harris		
Desnes (Pest200	3			
Farmer	1 mg	T		
Multid standor	2148 Yest 07	3.		
Canada Canad	Yet DI			
L'ANDER	1734			
the prime of state day	a second s			
Voltaget-service	1504			
VT #T1 rate	150V 1.00			
Eurori rege	Cenal 1 1006 Cenal 2: 1006			
ET rette Desid 1 180 Desid 2:100				
Readive power name name	011			
Longing	PLL			
PLL SIMACH	101 I			
Meanweight Inc. Impartie	8042			
Personal and a second	2 Minute (0002 10 30 00			
Number of the local state	09/12/2002 19:25:00			

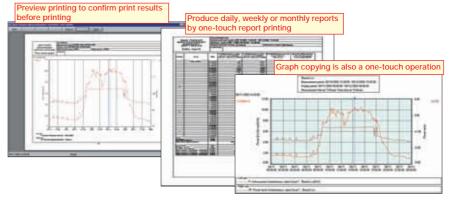

#### ■ 9625 Specifications

#### General Specifications

Supported instrument = models	3169-20, 3169-21 and 3166(CLAMP ON POWER HITESTERs)	Supplied Media :	One CD-R disc
Operating environment	Computer: PC-AT compatible (DOS/V machine)		
	CPU: Pentium 200 MHz or higher		
	Memory: 128 MB or more (recommended)		
	Hard disk: 128 MB or more free space		
	Display: XGA (1024×768) or higher		
	Disc device: CD-ROM drive (for installation)		
	Operating system: Windows95/98, NT4.0, 2000, Me,		
	XP (English edition)		
	Internet Explorer 4.0 or later		
	-		

#### Functional Specifications

#### [Data Load/Save Functions]

	Loading data	File extension	Data format	Data contents
	Data file	CSV	CSV	Instantaneous value, average value, maximum value, minimum value, integrated value, demand value, harmonic
<b>3169</b> -20/21	Waveform data file	WUI	Binary	Instantaneous waveform
	Short-interval data file	BIN	Binary	Instantaneous values
	Integrated measurement data file	ITG	CSV	Instantaneous value, integrated value
	Demand measurement data file	DEM	CSV	Instantaneous value, maximum value, minimum value, demand value
3166	Harmonic measurement data file	HRM	CSV	Instantaneous value, average value, maximum value
	Waveform data file	WUI	Binary	Instantaneous waveform
	Setting file	SET	-	
9625	Combined file	DAT	Binary	

	Save data	File extension	Data format	
9625	Combined file	DAT	Binary	

#### Maximum data capacity : Up to 528 MB per data set (total composite data up to 1.5 GB)

[Time Series Graph Display Function] Graph display item :	Voltage, current, active power, reactive power, apparent power,	Reference value setting :	Display set standard value
1 1 5	power factor, frequency, Integrated value(active power, reactive power),	Graph type selection :	Line, bar, 2-axes and 3-dimensional
	demand, harmonic (level, content ratio, phase angle, total value, THD)	Graph line type & color :	Line type and display color can be set for each data set,
Y-axis upper/lower :	The display position (upper and lower display limits) of the vertical	setting	and marker display is possible
limit setting	(Y) axis of a graph can be set by scroll bar or by specifying values.	Stacked bar graph :	Up to 16 types of data series (demand value, demand quantity)
Interval setting :	Select each cycle, or 0.1, 0.2, 0.5, 1, 2, 5, 10, 15 or 30 sec.; 1, 2,	display	can be displayed in an overlay graph
Ū	5, 10, 15 or 30 min.; or 1, 2, 3, 4, 6, 8 or 12 h; or 1 day		
Display period range :	An optional analysis period can be specified from the overall	Cursor measurement :	Measurement values can be displayed by the cursor
setting	measurement data period	Data display units setting :	Engineering units (m, k, M, G, etc.) can be selected
-	(1) Analysis start date and time (YMD, HMS) is specified numerically		
	(2) Analysis stop date and time (YMD, HMS) is specified numerically		
	Display of measurement data period (measurement start		
	and stop date and time)		

Daily, weekly and monthly report display Load factor calculation display Independent time range totalizing [Harmonic Display Function] Waveform display Graph display Cursor measurement [Setting Display Function]	<ul> <li>Select the items to display in the summary</li> <li>Displays a report for the specified daily weekly or monthly period</li> <li>Calculates the load factor and demand factor as a daily, weekly or monthly report, and displays the results</li> <li>Specify up to four time ranges and totalize data for each time range independently</li> <li>Displays waveform data for a specified time</li> <li>Displays a list of harmonic data for a specified time</li> <li>Displays the value at the cursor with waveform and graph displays</li> <li>Displays a list of the setting conditions</li> </ul>	[Copy Function] Copies to the clipboard [Print Function] Printing a displayed time series graph Printing a displayed summary Printing a harmonic display Printing the settings display Comment entry Printing support [Display Language] Language	<ul> <li>Each display can be copied to the clipboard</li> <li>Previews and prints the contents displayed on a time series graph</li> <li>Previews and prints the contents displayed in a summary</li> <li>Previews and prints the contents displayed in a harmonic spreadsheet</li> <li>Previews and prints the contents displayed in the settings display</li> <li>Text comments can be entered in any printout</li> <li>Any color or monochrome printing supported by the operating system</li> <li>English</li> </ul>
octang display	Loads setting conditions from a data file (3169-20/21) Loads setting conditions from a settings file (3166)		

## ■ 3169-20/21 Specifications

## Basic Specifications

Aeasurement line type :	Single-phase 2-wire, single-phase 3-wire, three-phase 3-wire, and	Instantaneous value :	Voltage, current, active power, reactive power, apparent power
	three-phase 4-wire systems (50/60 Hz)	display	power factor, frequency, average voltage, average current, (average
lumber of systems :			values are for each system)
hat can be measured	Single-phase: 1P2W 4 systems	Average value display :	Voltage, current, active power, reactive power, apparent power
for systems that share	1P3W 2 systems		power factor, frequency, average voltage, average current
he same voltage)	Three-phase: 3P3W2M (measures the voltage and current for two lines) 2 systems	Maximum/minimum :	* The average value from the beginning of time series measurement until the present. Voltage, current, active power, reactive power, apparent power
	3P3W3M (measures the voltage and current for all three lines) 1 system		power factor, frequency
	3P4W (measures the voltage and current for three lines) 1 system	value display	* The maximum/minimum value from the beginning of time series measurement until the present.
	3P4W4I1 system (measures the voltage for three lines and the current for four lines)	Integrate display :	Integrated value
tem :	Voltage, current, active power, reactive power, apparent power,		Active power (consumption/regeneration)
	power factor, integrated value, frequency, harmonics		Reactive power (lag/lead)
leasurement range :	For the voltage, current, and active power ranges, see the range		* The total integrated value from the beginning of time series measurement.
icasarcinent range .	configuration tables on page 2.	Demand volume display :	Integrated value
leasurement method :	Simultaneous digital sampling of voltage and current, PLL synchronization	(Integrated value within	Active power volume (consumption/regeneration)
incusurement method .	or a fixed clock (50/60 Hz)	the specified interval)	Reactive power volume (lag/lead) * The integrated value within each specified interval (latest value).
nput methods :	Voltage: Isolated input		
	Current: Isolated input using a clamp-on sensor	Demand value display :	Active power (consumption), reactive power (lag), power factor
ffective measurement area :	Within 5 to 110% of the range	(average value within	* The demand value within each specified interval (previous value).
otal display area :	Voltage and current: Within 0.4 to 130% of the range	the specified interval)	
	(zero is suppressed for less than 0.4%) Power: Within 0 to 130% of the range	Maximum demand value display :	The maximum demand value since the beginning of time serie
	(zero is suppressed when the voltage or current is zero)	(average value within the	measurement and the time and date it occurred.
	Harmonic level: Within 0 to 130% of the range	maximum specified interval) Harmonics list :	The of the inner many different constitution is for the
Display :	5.7-inch LCD (320 × 240 dots), with backlight	Halfionics list :	List of the items measured for the specified harmonic (numerica value).
Range switching method :	Manual (the current range can be set for each system)		(including the total value and total harmonic distortion factor (THD-F/THD-R))
Display update rate :	Approx. every 0.5 seconds	Harmonics graph :	Bar graph or vector diagram of the items measured for the specifie
	(except when using a PC card while accessing the internal memory, or when performing RS-232C communications)	• •	harmonic.
nput resistance :	Voltage: $2.0 \text{ M}\Omega \pm 10\%$ (differential input) Current: $200 \text{ k}\Omega \pm 10\%$		(cursor measurement, magnification update, with a linear/LOG axis selection function)
50/60 Hz) /aximum measurement :		Waveform display :	Voltage and current waveforms (with a magnification update
erminal voltage	Voltage input: 780 Vrms AC, peak value: 1103 V Current input: 1.7 Vrms AC, peak value: 2.4 V	Measurement value :	function)
Aaximum in-phase voltage :	Voltage input terminals: 600 Vrms AC (50/60 Hz)	enlargement display	Select and enlarge up to 5 items from the instantaneous valu
Crest factor :	Voltage: Less than 2 (for full-scale input)	eniargement display	display.
	Current: Less than 4 (for full-scale input)		
nternal memory capacity :	1MB		
	1010		

#### Measurement Specifications \_\_\_\_\_

[Voltage/current measurement] Measurement method : Measurement display : [Active power measurement] Measurement display :	True RMS method Measurement of three voltage lines and 3 or 4 current lines is possible when using three-phase 3-wire and three-phase 4-wire systems For three-phase 3-wire (the 3P3W3M setting), refer to the display for	[Frequency measurement] Measurement range : Input area for : guaranteed accuracy Measurement source : [Integrated measurement]	40.000 to 70.000 Hz Within 10 to 110% of the range Voltage U1	e (for sine wave input)
Polarity display :	For consumption: no symbol, for regeneration: "-"	Measurement range :	-0.00000 mW Reactive power : 0.00000 mv	Vh to 99999.9 GWh consumption Vh to -99999.9 GWh regeneration arh to 99999.9 Gvarh lag arh to -99999.9 Gvarh lead
A 1000 0 100 0 000 0 0 0 4 -	ON: Measures the reactive power directly using the reactive power measurement method OFF: Calculates the reactive power from the measurement values for	Measurement display :		sumption and regeneration separately
Polarity display :	voltage, current, and active power For lag phase (LAG : current is slower than voltage): no symbol For lead phase (LEAD: current is faster than voltage) : "-" (Reactive power measurement method "ON")	Window width :	Basic wave frequency: 45 to 66 PLL synchronization Up to the 40th order A single cycle (number of data	
[Apparent power measurement] _ Polarity display :	No polarity	Window type : Analysis rate : Item for analysis ;	Rectangular 1/16 cycles Harmonic level:	The voltage, current, or power level for
	-1.0000 (lead) to 0.0000 to +1.0000 (lag) For lag phase (LAG: current is slower than voltage) :no symbol For lead phase (LEAD: current is faster than voltage) : "-"	:	Harmonic content percentage: Harmonic phase angle:	The voltage, current, or power level for each harmonic order The voltage, current, or power content percentage for each harmonic order The voltage, current, or power phase angle for each harmonic order
5	40.000 to 70.000 Hz Within 10 to 110% of the range (for sine wave input) Voltage U1	:	Total value: Total harmonic distortion factor	The total value for voltage, current, or power up to the 40th harmonic order

#### Setting Specifications

[Setting contents]			
Measurement line settings :	1P2W, 1P3W, 3P3W2M, 3P3W3M, 3P4W, 3P4W4I		
Clamp-on sensor settings :	9660, 9661, 9667, and 9669 (* A different sensor can be set for each		
	system.)		
VT (PT) and CT ratio settings :	0.01 to 9999.99 (* A different CT ratio can be set for each system.)		
Measurement start method :	Manual or time (year, month, day, hour, minute)		
Measurement stop method :	Manual, time, or timer (1 seconds to 8784 hours)		
Output Interval :	Standard or fast (*Maximum measurement period: 1 year)		
	Standard interval: 1, 2, 5, 10, 15, or 30 seconds, or 1, 2, 5, 10, 15, 30,		
	or 60 minutes		
	Fast interval: A single waveform, or 0.1, 0.2, or 0.5 seconds		
Data output destination :	PC card, internal memory, or printer		
File name :	Automatically attached, or set the desired name		
	(up to 8 alphanumeric characters)		
Display averaging circuit :	OFF, 2, 5, 10, 20 times (for movement averaging)		
Screen copy destination :	PC card, internal memory, or printer		
Display language settings :	Japanese, English, German, French, Italian, Spanish		
Other settings :	(* Åll languages ofher than Japanese and English soon to be supported.) Reactive power measurement method selection, harmonic distortion		
other settings .	selection, order display selection, backlight settings, ID settings,		
	clock settings, etc.		
	clock settings, etc.		
[File operations]			
Copy file :	Copies files from the internal memory to the PC card.		
Load/Save selected file :	Loads/Saves the file(s) selected from the internal memory or PC card.		
Delete file :	Deletes the file(s) from the PC card.		
Format :	Initializes the PC card or internal memory.		
Storage format :	Measurement data: CSV format		
3	(binary format when using the fast interval setting)		
	Waveform data: Binary format		
	Screen data: BMP format		
	Settings data: CSV format		

#### External Interface Specifications

[D/A output]			
(3169-21 only)			
Number of output channels :	4 channels		
Output items :	For instantaneous values:	Activ	ge, current, average voltage, average current, e power, reactive power, apparent power, r factor, frequency
	For Integrated value:		ve power (consumption/regeneration) or ive power (lag/lead)
	For harmonics:		harmonic order (level, content percentage, hase angle), total value, THD-F/THD-R
Output level :	±5V DC/f.s.	1	0,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
	Polarity + 11 bits		
Output accuracy :	Measurement accuracy ±0	).2% f	f.s.
Temperature characteristic :	Less than ±0.02% f.s./°C		
Output resistance :	$100\Omega \pm 5\%$		
Output update rate :			ut (when a measurement item other than harmonics is set)
	For every 16 cycles of measu	iremer	nt input (when harmonics is set as the measurement item)
[D0]]			
[PC card]	Slot:		1 × PC Card Standard-compliant Type II
•	Card type:		Flash ATA card
	Compatible memory capa	city.	
	Storage content:	enty.	Settings data, measurement data, screen data
	C		0
[RS-232C]			
:	Printer or PC connected to	o an R	
	Compliance:		EIA RS-232C-compliant
	Transfer method:		Asynchronous communication method, full duplex
	Baud rate:		2400, 9600, 19200, 38400 bps
	Flow control and delimiter settings possible		ngs possible
[External I/O]	0		
			s measurement, data storage
	LOW level is output during time series measurement. A 0/5 V logic signal or a short-circuit/release contact signal		
Control signal level :	A U/5 V logic signal or a s	snort-	circuit/release contact signal

#### [Data output item] Voltage, current, active power, reactive power, apparent power, Instantaneous values power factor, frequency, average voltage, average current, (average values are for each system) The instanta eous value for interval output. Voltage, current, active power, reactive power, apparent power, power factor, frequency, average voltage, average current, (average Average value values are for each system) \* The average value for each system) Voltage, current, active power, reactive power, apparent power, Maximum/minimum value \* The maximum/minimum value for each interval (no event details provided). Active power (consumption/regeneration) Integrated value Reactive power (lag/lead) \* The total value since the beginning of the ement, and the power volume for each interval. of time cories man \* The total value since the beginning of time series measurement, and the power volume for each in Active power (consumption), reactive power (lag), power factor Demand value The value for each interval Maximum demand value : The maximum demand value since the beginning of time series measurement and the time and date it occurred. Each harmonic order (level, content percentage, and phase angle), total value, instantaneous value for THD-F/THD-R Harmonic Each harmonic order (level, content percentage, and phase angle), total value, average value for THD-F/THD-R for each interval Each harmonic order (level, content percentage, and phase angle), total value, maximum/minimum value for THD-F/THD-R within each interval (no event data provided) Waveform (Voltage or current) Waveform Status information Exceeds the voltage/current crest factor, PLL unlock, power failure, exceeds the display limit [Print items] Numerical values Prints the data selected as the data output item (during time series measurement) Waveform Hard copy of the screen (printing of each interval not available)

#### Formulae 2-wire systems)

17.1.	$U = \sqrt{\frac{1}{M} \sum_{s=0}^{M-1} (Us)^2}$	U: Inter-line voltage
Voltage	$U = V \frac{1}{M} \sum_{s=0}^{\infty} (Us)$	I : Line current
		M: Number of samples
Current	$I = \sqrt{\frac{1}{M} \sum_{s=0}^{M-1} (Is)^2}$	s : Sample count
		m: 128 samples per cycle
Active	$P = \frac{1}{M} \sum_{s=0}^{M-1} (Us \times Is)$	
Power	NI S=0	

#### Measurement is also possible using the reactive power measurement method

In addition to conventional calculation methods that search for reactive power using voltage, current, and active power, you can select the reactive power measurement method, which derives reactive power directly from voltage and current values, just as with the reactive power volume measurement method used in large-volume power consumers.

#### When using the reactive power measurement method:

Reactive $Q = \frac{1}{M} \sum_{s=0}^{M-1} \left\{ Us \times I(s + \frac{m}{4}) \right\}$	Derives reactive power directly from voltage and current values, just as with
$\begin{array}{ll} \text{Apparent} & S = \sqrt{P^2 + Q^2} \\ \text{power} & \end{array}$	the measurement of active power. (The same measurement principle is the same as that used to determine
Power $PF = \frac{P}{\sqrt{P^2 + Q^2}}$	reactive power by large-volume power consumers.)

When not using the reactive power measurement method:

Reactive power	$Q = \sqrt{S^2 P^2}$	Calculates reactive power after calculating the apparent power using
Apparent power	$S = U \times I$	the voltage, current, and RMS values.
Power factor	$PF = \frac{P}{S}$	

#### General Specifications

Operating temperature : and humidity Storage temperature : and humidity Withstand voltage : (50/60 Hz, 1-minute intervals)	<ul> <li>0 to 40°C, 80% RH or less (non-condensating)</li> <li>-10 to 50°C, 80% RH or less (non-condensating)</li> <li>5.55 kVrms AC: Between the voltage input terminal and the 3169 casing</li> <li>3.25 kVrms AC: Between the voltage input terminal and the current input terminal/external interface terminal</li> <li>2.3 kVrms AC: Between the power supply and the 3169 casing</li> <li>1.35 kVrms AC: Between the power supply and the current input terminal/external interface terminal</li> </ul>	·	Safety EN61010-1:1993 + A2:1995 Voltage input: Pollution degree 2, overvoltage category (anticipated transient overvoltage 6000V) Power supply connector: Pollution degree 2, overvoltage category (anticipated transient overvoltage 2500 V) EMC EN61326 - 1:1997+A1:1998+A2:2001 class A EN61000 - 3 - 2:2000, EN61000 - 3 - 3:1995+A1:2001 9438-03 voltage cord set (1) (1 cord each of black, red, yellow, and blue), voltage cord (1), ground adapter (3P to 2P) (1), input cord label (1), operating manuals (2) (Advanced edition and Quick Start
Maximum rated power : Dimensions and weight :			

#### Measurement accuracy

Voltage	Current/active power
±0.2%rdg.±0.1%f.s.	$\pm 0.2\%$ rdg. $\pm 0.1\%$ f.s. + clamp-on sensor accuracy

• Table of current and active power accuracy with clamp-on sensor combinations

Current rang	9694	9660	9661	9669	9667
0.5A	$\pm 0.5\%$ rdg. $\pm 0.3\%$ f.s.	-	-	-	-
1A	$\pm 0.5\%$ rdg. $\pm 0.2\%$ f.s.	-	-	-	-
5A	±0.5%rdg.±0.12%f.s.	$\pm 0.5\%$ rdg. $\pm 0.5\%$ f.s.	±0.5%rdg.±1.1%f.s.	-	-
10A	-	$\pm 0.5\%$ rdg. $\pm 0.3\%$ f.s.	$\pm 0.5\%$ rdg. $\pm 0.6\%$ f.s.	-	-
50A	-	±0.5%rdg.±0.14%f.s.	$\pm 0.5\%$ rdg. $\pm 0.2\%$ f.s.	-	-
100A	-	±0.5%rdg.±0.12%f.s.	±0.5%rdg.±0.15%f.s.	±1.2%rdg.±0.2%f.s.	-
200A	-	-	-	±1.2%rdg.±0.15%f.s.	-
500A	-	-	±0.5%rdg.±0.11%f.s.	-	$\pm 2.2\%$ rdg. $\pm 0.4\%$ f.s.
1000A	-	-	-	±1.2%rdg.±0.11%f.s.	-
5000A	-	-	-	-	$\pm 2.2\%$ rdg. $\pm 0.4\%$ f.s.

 $\pm 1$  dgt. for the measurement accuracy of effective power, reactive power, and apparent power

 $\pm 1$  dgt. for the calculation obtained from each measurement value  $\pm 0.5\%$  rdg.  $\pm 1$  dgt.

 $\begin{array}{rcl} \mbox{Conditions of guaranteed accuracy} & : & \mbox{After 30 minutes of warm-up, sine-wave input for : } & \mbox{23}^\circ C \ \pm 5^\circ C, \ \mbox{less than 80\% relative humidity} \end{array}$ : After 30 minutes of warm-up, sine-wave input, PF=1

guaranteed accuracy Fundamental waveform range for : 45 to 66 Hz

guaranteed accuracy Display area for guaranteed accuracy : Effective measurement area

> Note: The table of accuracy for different clamp-on sensor combinations indicates the measurement accuracy for each current range of the 3169-20/21. (The accuracy for each clamp-on sensor is converted and displayed according to the 3169-20/21 current measurement range.)

	Reference: Accuracy of the 9694,9660, 9661, 9667, and 9669
	CLAMP ON SENSORE
	• 9694 (rated for 5 A) : ±0.3%rdg.±0.02%f.s.
	• 9660 (rated for 100 A) : ±0.3%rdg.±0.02%f.s.
	• 9661 (rated for 500 A) : ±0.3%rdg.±0.01%f.s.
	• 9669 (rated for 1000 A): ±1.0%rdg.±0.01%f.s.
	• 9667 (rated for 5000 A): ±2.0%rdg.±1.5mV
	(500 A range: For 50 to 500 A input)
	(5000 A range: For 500 to 5000 A input)
•	* f.s. is the sensor's rated primary current value.

Fundamental waveforms up to the 50th order ±3% f.s. + measurement accuracy (of a 45- to 66-Hz fundamental waveform)
Within ±0.03% f.s./°C
Within $\pm 0.2\%$ f.s.
(600 Vrms AC, 50/60 Hz, between voltage input terminal and case)
Within $\pm 1.5\%$ f.s.
(in a magnetic field of 400 A/m rms AC, 50/60 Hz)
±1.0% rdg.
(45 to 66 Hz, power factor = 0.5, for effective power measurement)
±1.0% rdg.
(45 to 66 Hz, reactive factor = 0.5, when using the reactive power measurement method)
±10 ppm ±1 second (23°C) (within ±1.9 sec/day (23°C))

## Option Specifications

Integration accuracy : Power factor accuracy

Frequency accuracy

 Apparent power accuracy :
 ±1 dgt. for the calculation obtained from each measurement value

 Reactive power accuracy :
 When using the reactive power measurement method

 ±0.2% rdg. ±0.1% f.s. + clamp-on sensor accuracy


 When not using the reactive power measurement method

 ±1 dgt. for the calculation obtained from each measurement value

CLAMP ON SENSOR	9694	9660	9661	9669
Appearance	Cord length: 3 m (9.84ft) CAT III 300V	Сого length: 3 m (9.84ft) САТ Ш 600V	Cot III 600V	Согд length: 3 m (9.84ft) САТ Ш 600V
Primary current rating	AC 5 A	AC 100 A	AC 500 A	AC 1000 A
Output voltage	AC 10mV/A	AC 1mV/A	AC 1mV/A	AC 0.5mV/A
Accuracy Amplitude	±0.3%rdg.±0.02%f.s.	±0.3%rdg.±0.02%f.s.	±0.3%rdg.±0.01%f.s.	±1.0%rdg.±0.02%f.s.
(45 to 66 Hz) Phase	Within ±2°	Within $\pm 1^{\circ}$ (within $\pm 1.3^{\circ}$ for 90 A or more)	Within ±0.5°	Within ±1°
Frequency characteristic	Within ±1.0% at 66 Hz to 5 kHz (deviation from accuracy)		Within ±2.0% at 66 Hz to 5 kHz (deviation from accuracy)	
Effect of external magnetic field	Equivalent to 0.1 A or less (with a magnetic field of 400 A/m AC)			Equivalent to 1 A or less (with a magnetic field of 400 A/m AC)
Effect of conductor position	Within ±0.5%		Within ±1.5%	
Maximum rated voltage to earth	300 V rms (insulated conductor)	300 V rms (insulated conductor)	600 V rms (insulated conductor)	600 V rms (insulated conductor)
Maximum input (45 to 66 Hz)	50 A continuous	130 A continuous	550 A continuous	1000 A continuous
Measurable conductor diameter	Less than $\phi$ 15 mm(0.59")	Less than $\phi$ 15 mm(0.59")	Less than \$\$46 mm(1.81")	Less than \$55 mm(2.17"), 80(3.15") × 20 (0.79")mm bus bar
Dimensions and weight	46W(1.81") × 135H(5.31") × 21D(0.83") mm, 230g(9.9oz.)	46W(1.80") × 135H(5.31") × 21D(0.83") mm, 230g(9.9oz.)	77W(3.03") × 151H(5.94") × 42D(1.65")mm, 360g(12.7oz.)	99.5W(3.92") × 188H(7.40") × 42D(1.65") mm, 590g(20.8oz.)

CLAMP ON SENSOR	9667	
Appearance	Cord length: Sensor - circuit: 2 m(6.56ft) Circuit - connector: 1 m(3.28ft) C€ CAT Ⅲ 1000V	
Primary current rating	AC 500 A, 5000A	
Output voltage	AC 500 mV f.s.	
Accuracy Amplitude	$\pm 2.0\% rdg. \pm 1.5 mV$ (for input 10% or more of the renge)	
(45 to 66 Hz) Phase	Within ±1°	
Frequency characteristic	Within ±3 dB at 10 Hz to 20 kHz (deviation from accuracy)	
Effect of external magnetic field	Equivalent to 5 A, 7.5 A max. (with a magnetic field of 400 A/m AC)	
Effect of conductor position	Within ±3.0%	
Maximum rated voltage to earth	1000 V rms (insulated conductor)	
Maximum input (45 to 66 Hz)	10000 A continuous	
Measurable conductor diameter	Less than \$\$\phi\$ 254 mm(10.0")	
Dimensions and weight	Sensor: 910 mm(2.99ft) long, 240g(8.5oz.), Circuit: 57W(2.24") × 86H(3.39") × 30D(1.18") mm, 140g(4.9oz.)	
Power supply	LR03 alkaline battery × 4 (continuous operation max. 168 hours) or 9445 AC ADAPTER(optional)	

## Option Specifications

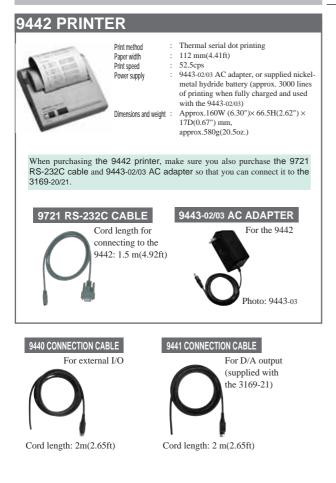

## 3169-20 CLAMP ON POWER HITESTER (supplied with the 9438-03 voltage cord, power cord (1), and ground adapter

(3P to 2P) (1))

#### 3169-21 (with D/A output) CLAMP ON POWER HITESTER

(supplied with the 9438-03 voltage cord, 9441 connection cable, power cord (1), and ground adapter (3P to 2P) (1))

Accessory Specifications

9438-03 VOLTAGE CORD (1 cord each of black, red, yellow, and blue, cord length: 3 m(9.84ft)) CONNECTION CABLE (D/A output cable, supplied with the 3169-21) 9441

Current and power cannot be measured using the 3169-20/21 CLAMP ON POWER HITESTER on its own. To perform current and power measurement, make sure you also purchase a CLAMP ON SENSOR (9694, 9660, 9661, 9667, or 9669) (sold separately). Use only PC Cards (9626, 9627, 9726, 9727or 9728) sold by HIOKI.

Compatibility and performance are not guaranteed for PC cards made by other manufacturers. You may be unable to read from or save data to such cards.

#### Combination examples

For single-phase 2-wire systems (one system)	:	3169-20 +
For single-phase 3-wire systems	:	3169-20 +
(one system/two single-phase 2-wire systems)		
For three-phase 3-wire systems (one system)	:	3169-20 +
For three-phase 3-wire systems	:	3169-20 +
(two systems/four single-phase 2-wire systems)		

For three-phase 4-wire systems (one system) : 3169-20 + 9661(500A) × 3 +9627(64MB)

3169-20 + 9660(100A) × 1 +9627(64MB)	
3169-20 + 9660(100A) × 2 +9627(64MB)	
3169-20 + 9661(500A) × 2 +9627(64MB)	

9661(500A) × 4 +9627(64MB)



#### HIOKI E.E. CORPORATION

#### HEAD OFFICE

81 Koizumi, Ueda, Nagano, 386-1192, Japan TEL +81-268-28-0562 / FAX +81-268-28-0568 E-mail: os-com@hioki.co.jp

HIOKI USA CORPORATION : 6 Corporate Drive, Cranbury, NJ 08512 USA TEL +1-609-409-9109 / FAX +1-609-409-9108 E-mail: hioki@hiokiusa.com

# Shanghai Representative Office :

 
 Sharagha Times Settative Office

 1704 Sharaghai Times Square Office

 93 Huaihai Zhong Road

 Shanghai, 200021, P.R.China

 TEL +86-21-6391-0090, 0092

 FAX +86-21-6391-0360
 E-mail: hioki-sh@81890.net

#### 9626 to 9728 PC CARD



Use only PC Cards (9626, 9627, 9726, 9727, or 9728) sold by HIOKI.

#### 9720 CARRYING CASE



A soft type case for storing the 3169-20/21 and its accessories, such as the clamp-on sensors.

Approx. 445W(17.52") × 340H(13.39") Dimensions and : ×150D(5.91") mm, approx. 2.2 kg(77.6oz.) weiaht

#### 9290-10 CLAMP ON ADAPTER



Measurable conductor diameter \$55 mm(2.17"), width 80 mm(3.46") Bus bar : CT ratio: 10:1 \*Used for expanding the measurement ranges of the 9660 and 9661 sensors

#### Options

- 0 pt.	0110
9660	CLAMP ON SENSOR (AC 100A)
9661	CLAMP ON SENSOR (AC 500A)
9667	FLEXIBLE CLAMP ON SENSOR (AC 5000A)
9669	CLAMP ON SENSOR (AC 1000A)
9694	CLAMP ON SENSOR (AC 5A)
<b>9290</b> -10	CLAMP ON ADAPTER (AC 1500A)
9440	CONNECTION CABLE (for external I/O)
9612	RS-232C CABLE (for connection to a PC)
9442	PRINTER
9443-02	AC ADAPTER (for the 9442, for Europe)
9443-03	AC ADAPTER (for the 9442, for USA)
9721	RS-232C CABLE (for connection to the 9442)
1196	RECORDING PAPER (25 m(82ft)/10 rolls, for the 9442)
9720	CARRYING CASE
9625	POWER MEASUREMENT SUPPORT SOFTWARE
9626	PC CARD 32M
9627	PC CARD 64M
9726	PC CARD 128M
9727	PC CARD 256M
9728	PC CARD 512M

DISTRIBUTED BY